

Certificate of Analysis

KPL 10X Tris-Glycine Transfer Buffer

PART Code 5460-0012 (51-10-02)
Lot No. 10282008
SIZE 5 L

DESCRIPTION Western blot transfer buffer. To prepare 1X Towbin buffer for Western blot transfer, mix 100 mL KPL 10X Tris-Glycine Transfer Buffer, 200 mL methanol, and 700 mL reagent quality water. Do not adjust pH.

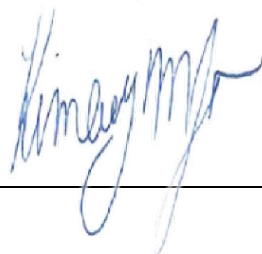
FORM/STORAGE Liquid. Store at room temperature.

CONTENTS Supplied as a 5L container(s).

STABILITY Product is stable for one year from date of receipt when stored at room temperature.

DATE OF MANUFACTURE 09 AUG 2017

Approval:

A handwritten signature in blue ink, appearing to read "Kimay M".

Quality Assurance

17 AUG 2017

Date